


STEP 1



NOTE: PRE-DRILL 7MM HOLE/S IN THE REAR CROSS-BRACE. (1 CENTRED FOR SMALLER UNITS OR 1 ON BOTH SIDES FOR 600MM AND OVER)

ONCE THE CABINET IS IN PLACE, DRILL A 6MM HOLE THROUGH THE HOLE/S IN THE CROSS-BRACE DIRECTLY INTO THE WALL BEHIND AND INSERT YOUR WALL-PLUG/S.


STEP 3

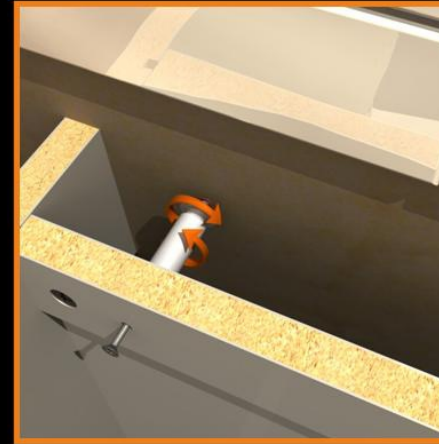

NOW UNWIND THE SPACE-PLUG UNTIL IT FIRMLY CONTACTS BOTH SURFACES.


NOTE: YOU CAN EVEN OVER EXTEND TO REPLACE SHIMS OR EXPAND FOR WIDER W/TOPS!

STEP 2

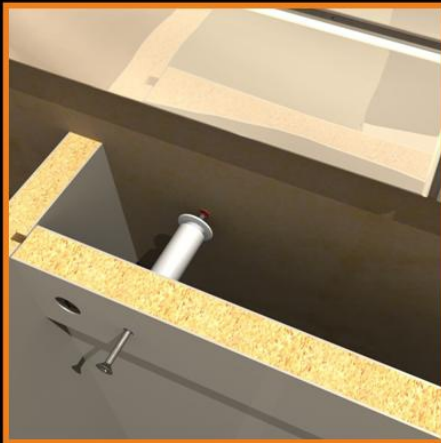

NEXT, PASS A SCREW THROUGH THE CROSS-BRACE, THROUGH THE SPACE-PLUG AND LOCATE IT INTO THE WALL PLUG.

STEP 4

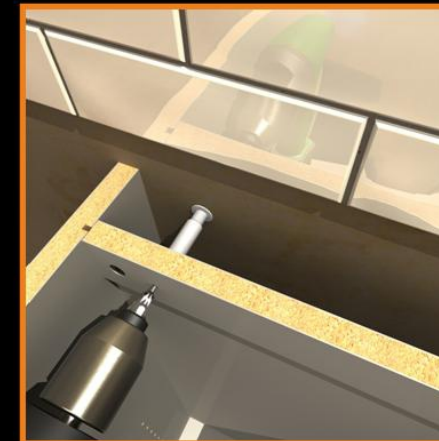

FINALLY, TIGHTEN THE SCREW!